




Digital Accelerator

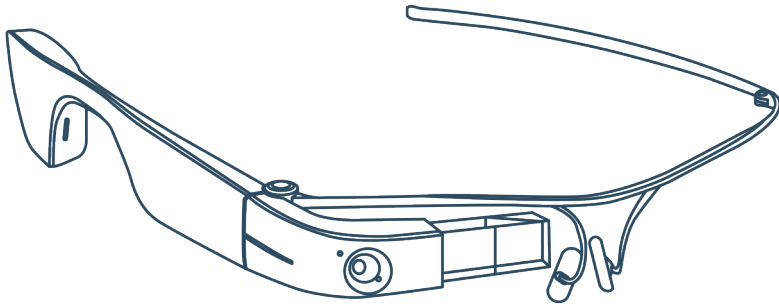

Glass Enterprise Edition 2

Getting Started

XpertEye Advanced

amaxperteye.com

A. Glass EE2


Before using the XpertEye solution, make sure the device (smartphone or tablet) and the Glass EE2 are charged. For more information refer to section C – “Exit and charge the XpertEye solution”.

1




Turn on the device.

2

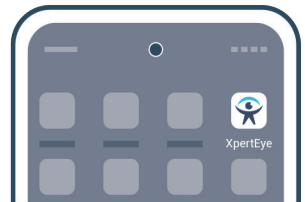


Launch the XpertEye Advanced application.

3

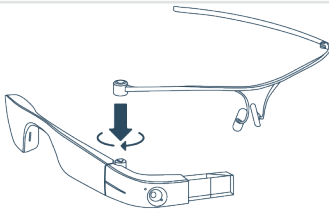


Attach the frame to the Glass.

4

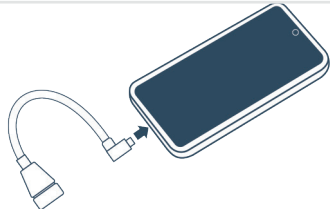


Connect the USB/USB-C (female) cable to the device.

5

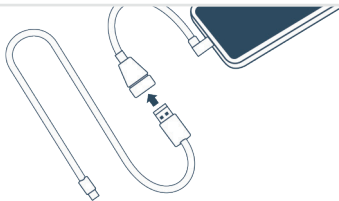


Connect the USB/USB-C (male) cable and connect it to the female connector.

6

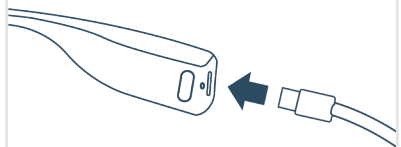


Connect the USB-C connector to the Glass. The Glass automatically switches on.
Note: When the Glass is on, folding it will enter the standby mode.

7

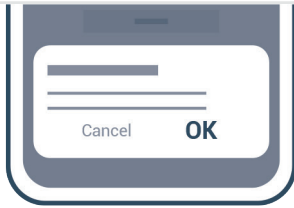

Once the Glass is on, go to the XpertEye Advanced application and accept the Android authorization requests to use the Glass camera.

8

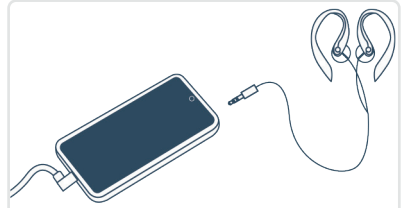

Connect the earphones to the device.

B. Glass EE2, Holster and Hub Battery


Before using the XpertEye solution, make sure the device (smartphone or tablet), the Glass EE2, and the hub battery are charged. For more information refer to section C - "Exit and charge the XpertEye solution".

1



Turn on the device.

2

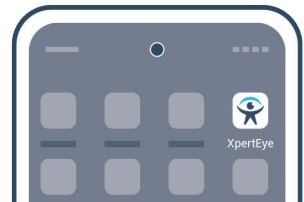

Launch the XpertEye Advanced application.


3



Turn on the battery's hub mode by double pressing the "on" button.

Note: A blue light indicates that the hub mode is on.

4

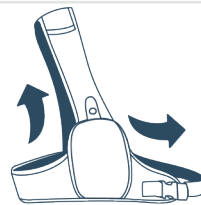


Unfold the holster.

5




Pass the USB-C cable through the holster, from back to the front.

6

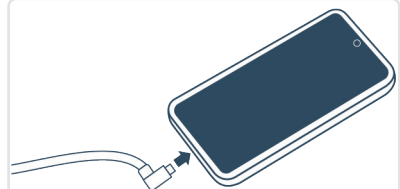


Connect the USB-C cable to the device.

7

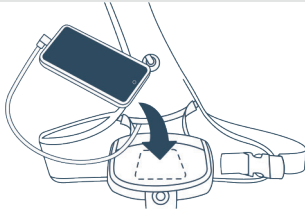

Attach the device to the holster pocket.

8

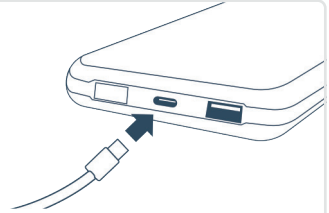


Connect the USB-C cable to the hub battery.

9




Put the hub battery in the back pocket.

10

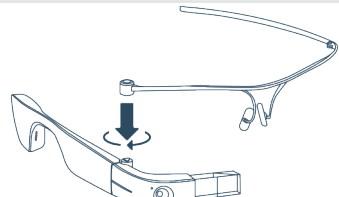


Attach the frame to the Glass.

11

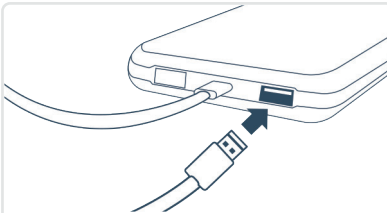


Take the USB/USB-C cable and connect the USB connector to the hub battery.

12

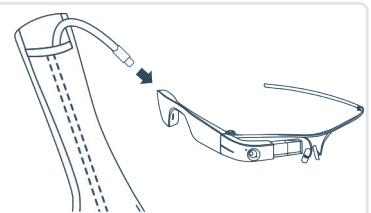


Pass the USB-C cable through the holster from the bottom up and connect to the Glass. The Glass automatically switches on.
Note: When the Glass is on, folding it will enter standby mode.

13

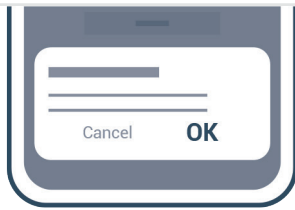


Once the Glass is on, go to the XpertEye Advanced application and accept the Android authorization requests to use the Glass camera.

14

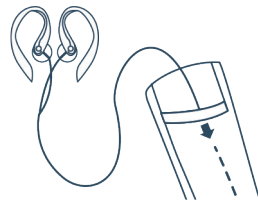

Pass the earphones through the holster, from top to the bottom.


15

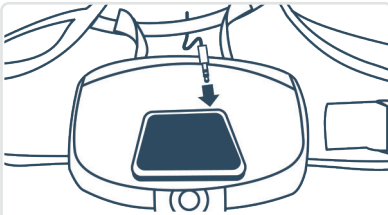

Connect the earphones to the device and zip the holster.

C. Exit and charge the XpertEye solution

1

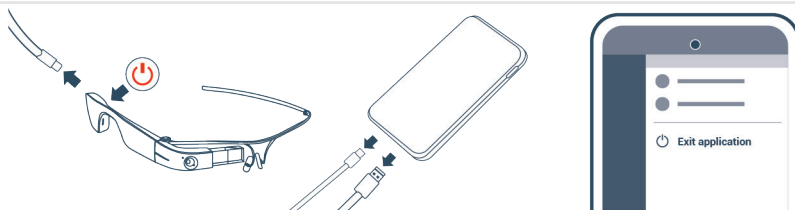

- Unplug the Glass and press the power button.
- Unplug the hub battery.
- From the XpertEye menu, press **Exit application**.

2



- Charge the Glass using a USB/USB-C cable and a wall charger.
- Repeat this step with the hub battery (port n°2).
- Charge the device with the dedicated charger.

Note:

Glass EE2 charging time: 40 minutes

Blinking LED: Charging

Solid LED: Charged

